

HMT® Pro-Fill Load Alert™ Tells you when to add adhesive to your melt tank.


Boost the efficiency of your hot melt system with our Pro-Fill Load Alert™ innovation. Use it with HMT ProFlex and Benchmark HP systems. It keeps track of how much adhesive you are using and notifies you when it's time to re-fill the melt tank. And it can be used with HMT's Pro-Fill Auto-Fill™ system, another innovation from HMT that automatically fills your hot melt tank and keeps it filled.

The Advantages of Keeping the Tank Full:

- Keeping the tank full provides steady, uninterrupted flow of hot melt
- Takes full advantage of the tank's Melt-On-Demand design
- Reduces degradation and the formation of char
- Eliminates "I forgot to fill the tank" downtime

Operation of our Pro-Fill Load Alert™ is simple and easy to use:

1. Load the tank with adhesive
2. Choose the "Re-Fill Amount" 1 – 30 lbs
3. Operate the system normally
4. Visual and Audible alarms notify when the tank needs Re-Loading
5. Load the melt tank and press Reset

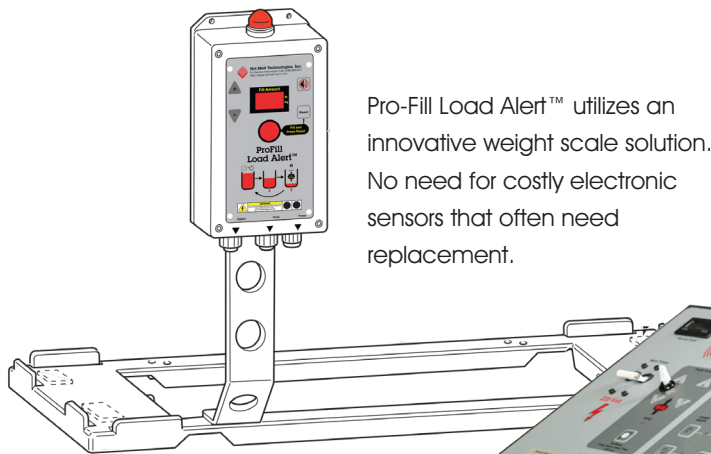

Pro-Fill Load Alert™ utilizes an innovative weight scale solution. No need for costly electronic sensors that often need replacement.



Hot Melt Technologies, Inc.

No One Puts It Together Like HMT.

1723 W. Hamlin Road
Rochester Hills, Michigan 48309
Phone: 248-853-2011
Fax: 248-853-6650
Email: info@hotmelt-tech.com
ISO 9001 – INTERNATIONAL QUALITY
ASSURANCE STANDARD

