




Integrated System Timer

934-247

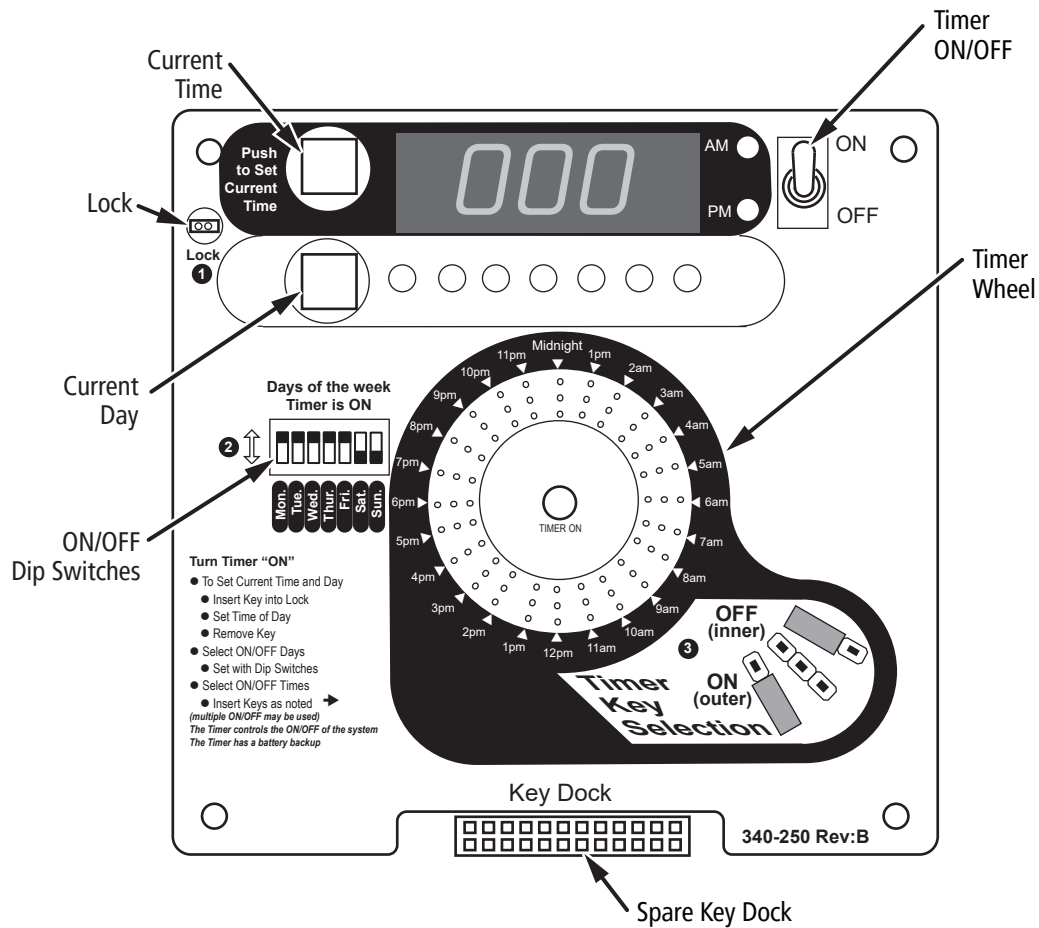

Lock

- ▶ Key in allows you to make changes.
- ▶ Key out prevents tampering.

Timer Activation:

- ▶ To activate the timer, turn the toggle switch to "ON" position. The timer can now control the "ON/OFF" of the system.
- ▶ To deactivate the timer, turn the toggle switch to the "OFF" position.

Setting Current Time and Day

- ▶ Insert a Key from the Key Dock into the Lock. (upper left)
- ▶ Push the Current Time button and scroll forward to set the time on the LED screen.
- ▶ Push the Current Day button to scroll forward to the current day, LED light will be lit.
- ▶ Remove the Key from the Lock to prevent tampering.

Set "ON/OFF" Days

- ▶ Set the Dip switches to the desired "ON/OFF" position for all seven days.

Set "ON/OFF" Times

- ▶ Insert Keys into the desired "ON/OFF" positions on the timer wheel. Multiple "ON/OFF" may be used.
- ▶ Times selected will turn the system "ON/OFF" for days where the Dip switches are set in the "ON" position.
- ▶ The Timer has a battery backup to retain the current time and day settings.

